

Suggestions on how to prepare the drawing of a DECO SHAPE bath

Each DECO SHAPE bath is one of a kind – made to the measures and drawing provided by client




How to measure

- All measurements have to be made:
 - in millimeters
 - for the height of bath surface
 - to walls with done finishing, e.g., walls with tiles
- Make sure the walls are straight, to avoid unexpected gaps between the wall and bath

How to draw your bath

- Explore the illustration *Example of a bath drawing*
- Choose one side of grid in the drawing *Maximum size of a bath's surface* to represent a side of your bath that is next to the wall, then draw other walls that will border your bath
- Cut out (alongside dashed line) bath from the illustration *Minimum size of a bath* and see where it fits in your drawing, glue it once there is a perfect fit
- Draw the outer border(s) of your bath
IMPORTANT! Mark the place for water mixer and make sure that water supply is feasible there. The same goes for draining of water
- Show measures for all elements of your bath in the same manner, as in illustration *Example of a bath drawing*

Example of a bath drawing

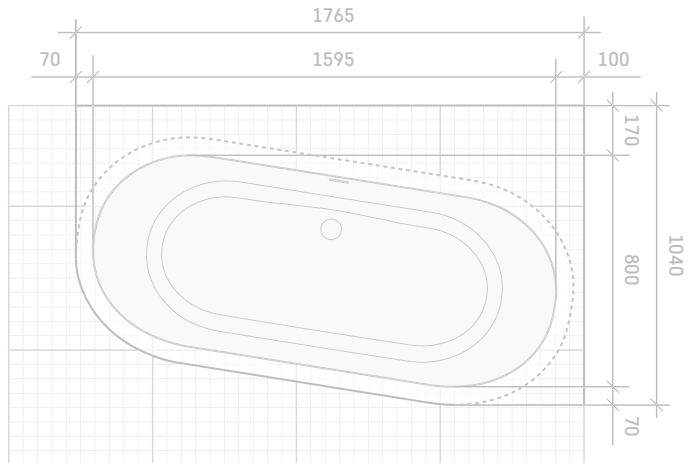


- Hole locations for mixer placement must be shown on drawing with corresponding diameters

Maximum size of bath's surface

2500 × 1300 mm; 1 box = 50 × 50 mm

= 50 × 50 mm

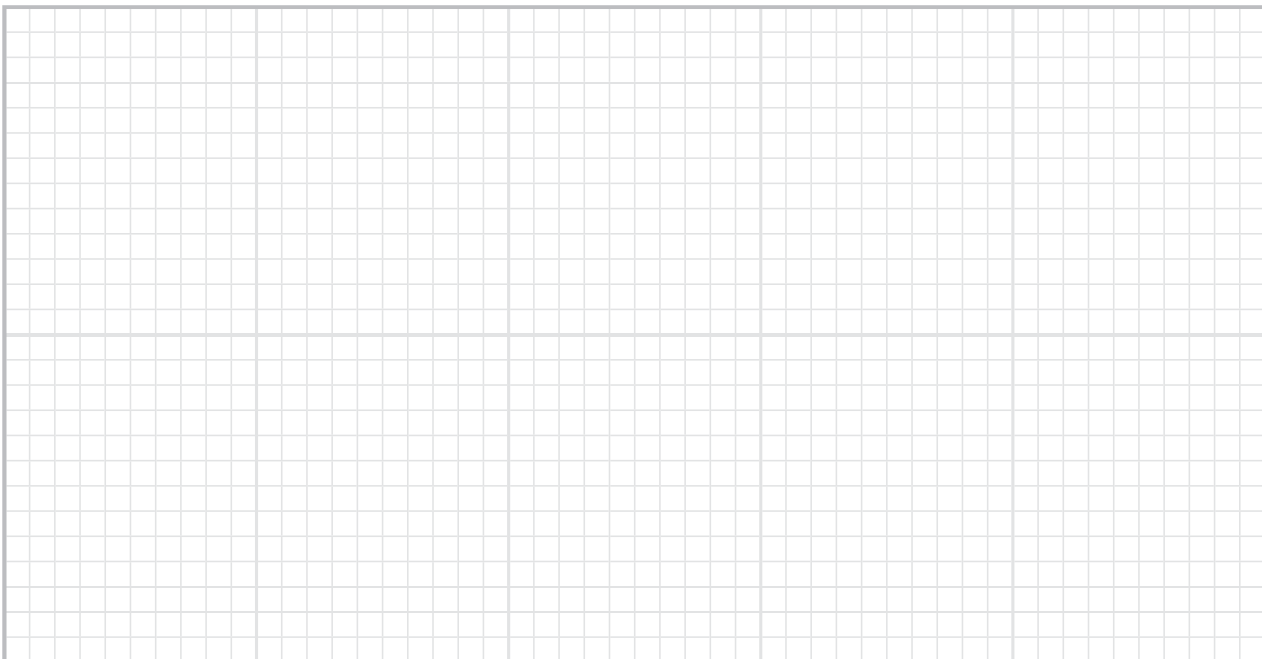

Minimum size of bath 1660 × 725 mm

